
DXGNi35E

Generator Owner's Manual

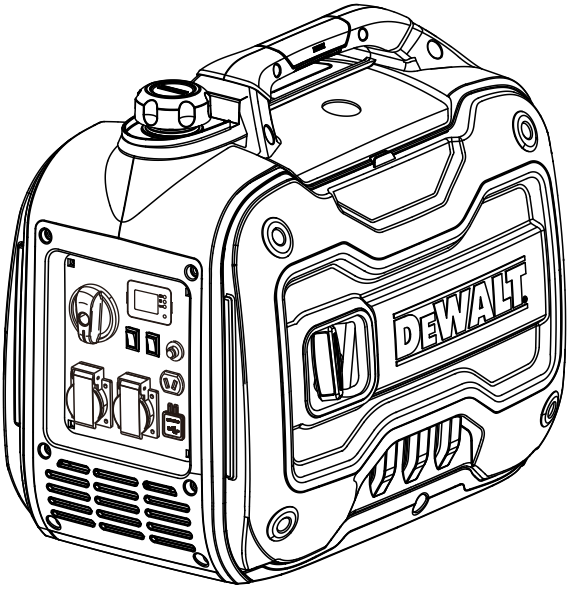

SAFETY /SÉCURITÉ / SICHERHEIT/ SICUREZZA / SEGURIDAD / SEGURANÇA / VEILIGHEID



EN **Perform a visual inspection of the external and internal components.**

FR **Effectuez une inspection visuelle des composants externes et internes.**

DE **Führen Sie eine Sichtprüfung der externen und internen Komponenten durch**

IT **Eseguire un'ispezione visiva dei componenti esterni e interni.**

ES **Realice una inspección visual de los componentes externos e internos.**

PT **Realize uma inspeção visual dos componentes externos e internos.**

NL **Voer een visuele inspectie uit van de externe en interne componenten.**



EN **The temperature range for the use of this equipment is between + 5ºC and + 40ºC**

FR **La plage de température pour l'utilisation de cet équipement est comprise entre + 5ºC et + 40ºC**

DE **Der Temperaturbereich für die Verwendung dieses Geräts liegt zwischen + 5 ° C und + 40 ° C.**

IT **L'intervallo di temperatura per l'uso di questa apparecchiatura è compreso tra + 5 ° C e + 40 ° C.**

ES **El rango de temperatura para el uso de este equipo está entre +5ºC y +40ºC.**

PT **A faixa de temperatura para o uso deste equipamento está entre + 5ºC e + 40ºC.**

NL **Het temperatuurbereik voor het gebruik van deze apparatuur ligt tussen + 5ºC en + 40ºC.**



EN **All items must be cleaned regularly.**

FR **Tous les articles doivent être nettoyés régulièrement.**

DE **Alle Gegenstände müssen regelmäßig gereinigt werden.**

IT **Tutti gli articoli devono essere puliti regolarmente.**

ES **Todos los elementos deben limpiarse regularmente.**

PT **Todos os itens devem ser limpos regularmente.**

NL **Alle items moeten regelmatig worden schoongemaakt.**



EN **The air filter must be cleaned regularly.**

FR **Le filtre à air doit être nettoyé régulièrement.**

DE **Der Luftfilter muss regelmäßig gereinigt werden.**

IT **Il filtro dell'aria deve essere pulito regolarmente.**

ES **El filtro del aire debe ser limpiado regularmente.**

PT **O filtro de ar deve ser limpo regularmente**

NL **Het luchtfilter moet regelmatig worden schoongemaakt.**

SAFETY /SÉCURITÉ / SICHERHEIT/ SICUREZZA / SEGURIDAD / SEGURANÇA / VEILIGHEID



EN The exhaust gases contain carbon monoxide. This gas is colorless and odorless and is very dangerous. NEVER USE THE EQUIPMENT IN A LOCATION CLOSED OR WITH POOR VENTILATION.

FR Les gaz d'échappement contiennent du monoxyde de carbone. Ce gaz est incolore et incolore et est très dangereux. NE JAMAIS UTILISER L'ÉQUIPEMENT DANS UN ENDROIT FERMÉ OU AVEC UNE MAUVAISE VENTILATION.

DE Die Abgase enthalten Kohlenmonoxid. Dieses Gas ist farblos und farblos und sehr gefährlich. VERWENDEN SIE DAS GERÄT NIEMALS AN EINEM GESCHLOSSENEN STANDORT ODER MIT SCHLECHTER BELÜFTUNG.

IT I gas di scarico contengono monossido di carbonio. Questo gas è incolore e incolore ed è molto pericoloso. NON UTILIZZARE MAI L'APPARECCHIATURA IN UN LUOGO CHIUSO O CON VENTILAZIONE SCARSA.

ES Los gases del escape contienen monóxido de carbono. Este gas es inoloro e incoloro y es muy peligroso. NUNCA UTILICE EL EQUIPO E UN LUGAR CERRADO O CON POBRE VENTILACIÓN.

PT Os gases de escape contêm monóxido de carbono. Este gás é incolor e incolor e é muito perigoso. NUNCA USE O EQUIPAMENTO EM LOCAL FECHADO OU COM POUCA VENTILAÇÃO.

NL De uitlaatgassen bevatten koolmonoxide. Dit gas is kleurloos en kleurloos en is zeer gevaarlijk. GEBRUIK DE APPARATUUR NOOIT OP EEN GESLOTEN LOCATIE OF MET SLECHTE VENTILATIE.



EN The repair of the generator must be carried out by qualified and authorized personnel for this purpose

FR La réparation du générateur doit être effectuée par du personnel qualifié et autorisé à cet effet

DE Die Reparatur des Generators muss zu diesem Zweck von qualifiziertem und autorisiertem Personal durchgeführt werden

IT La riparazione del generatore deve essere eseguita da personale qualificato e autorizzato a tale scopo

ES La reparación del generador debe ser realizada por personal cualificado y autorizado para este fin

PT O reparo do gerador deve ser realizado por pessoal qualificado e autorizado para esse fim.

NL Hiervoor moet de reparatie van de generator worden uitgevoerd door gekwalificeerd en geautoriseerd personeel

---



EN Store the generator in an area with good ventilation

FR Stockez le générateur dans un endroit bien ventilé.

DE Lagern Sie den Generator an einem Ort mit guter Belüftung.

IT Conservare il generatore in un'area ben ventilata per questo scopo.

ES Almacene el generador en un área con buena ventilación para este fin

PT Armazene o gerador em uma área com boa ventilação.

NL Bewaar de generator in een goed geventileerde ruimte

SAFETY /SÉCURITÉ / SICHERHEIT/ SICUREZZA / SEGURIDAD / SEGURANÇA / VEILIGHEID



EN **The guarantee is automatically canceled if you do not follow the described start and stop process.**

FR **La garantie est automatiquement annulée si vous ne suivez pas le processus de démarrage et d'arrêt décrit.**

DE **Die Garantie erlischt automatisch, wenn Sie den beschriebenen Start- und Stoppvorgang nicht befolgen.**

IT **La garanzia viene automaticamente annullata se non si segue il processo di avvio e arresto descritto.**

ES **La garantía queda automáticamente anulada si no sigue el proceso descrito de arranque y paro**

PT **A garantia é cancelada automaticamente se você não seguir o processo de início e parada descrito.**

NL **De garantie wordt automatisch geannuleerd als u het beschreven start- en stopproces niet volgt**



EN **Failure to follow the described process may damage the equipment. For this purpose**

FR **Le non-respect du processus décrit peut endommager l'équipement.**

DE **Die Nichtbeachtung des beschriebenen Vorgangs kann das Gerät beschädigen**

IT **La mancata osservanza del processo descritto può danneggiare l'apparecchiatura A tale scopo**

ES **No respetar el proceso descrito, puede dañar el equipo.**

PT **O não cumprimento do processo descrito pode danificar o equipamento.**

NL **Het niet opvolgen van de beschreven procedure kan de apparatuur beschadigen. Voor dit doeleinde**



EN **Check the screws and nuts that due to the vibration of the equipment could loosen.**

FR **Vérifiez les vis et les écrous qui, en raison des vibrations de l'équipement, pourraient se desserrer.**

DE **Überprüfen Sie die Schrauben und Muttern, die sich aufgrund der Vibration des Geräts lösen könnten.**

IT **Controllare le viti e i dadi che a causa della vibrazione dell'attrezzatura potrebbero allentarsi.**

ES **Verifique los tornillos y tuercas que debido a la vibración del equipo podrían aflojarse.**

PT **Verifique os parafusos e porcas que devido à vibração do equipamento podem afrouxar.**

NL **Controleer de schroeven en moeren die door de trillingen van de apparatuur zouden kunnen loskomen.**

SAFETY /SÉCURITÉ / SICHERHEIT/ SICUREZZA / SEGURIDAD / SEGURANÇA / VEILIGHEID



EN **Good quality oil and fuel are imperatives for using the equipment.**

FR **Une huile et un carburant de bonne qualité sont impératifs pour l'utilisation de l'équipement.**

DE **Für die Verwendung der Geräte sind Öl und Kraftstoff von guter Qualität unerlässlich.**

IT **Olio e carburante di buona qualità sono indispensabili per l'utilizzo dell'attrezzatura.**

ES **Aceite y combustible de buena calidad son imperativos para el uso del equipo.**

PT **Óleo e combustível de boa qualidade são imperativos para o uso do equipamento.**

NL **Olie en brandstof van goede kwaliteit zijn noodzakelijk voor het gebruik van de apparatuur.**



EN **Long-term storage should be done in a dry place. Frost can damage the equipment. Thoroughly dry equipment before storage and store in a dry, not cold place.**

FR **Le stockage à long terme doit être effectué dans un endroit sec. Le gel peut endommager l'équipement. Sécher soigneusement l'équipement avant le stockage et le stocker dans un endroit sec et non froid.**

DE **Die Langzeitlagerung sollte an einem trockenen Ort erfolgen. Frost kann die Ausrüstung beschädigen. Trocknen Sie die Geräte vor der Lagerung gründlich und lagern Sie sie an einem trockenen und nicht kalten Ort.**

IT **La conservazione a lungo termine deve essere effettuata in un luogo asciutto. Il gelo può danneggiare l'attrezzatura. Asciugare accuratamente l'attrezzatura prima di riporla e riporla in un luogo asciutto, non freddo.seco y no frío.**

ES **Un almacenaje de larga duración debe realizarse en lugar seco. Las heladas pueden dañar el equipo. Seque completamente el equipo antes del almacenaje y guárdelo en lugar seco y no frío.**

PT **O armazenamento a longo prazo deve ser feito em local seco. Frost pode danificar o equipamento. Seque bem o equipamento antes de armazená-lo e guarde-o em local seco e não frio.seco y no frío.**

NL **Langdurige opslag moet op een droge plaats gebeuren. Vorst kan de apparatuur beschadigen. Droog de apparatuur grondig voordat u ze opbergt en bewaar ze op een droge, niet koude plaats.**



EN **Make sure all filters are cleaned regularly.**

FR **Assurez-vous que tous les filtres sont nettoyés régulièrement.**

DE **Stellen Sie sicher, dass alle Filter gereinigt sind regelmäßig**

IT **Assicurarsi che tutti i filtri siano puliti regolarmente.**

ES **Asegurese que todos los filtros de limpian regularmente.**

PT **Verifique se todos os filtros estão limposregularmente.**

NL **Zorg ervoor dat alle filters regelmatig worden schoongemaakt.**

SAFETY /SÉCURITÉ / SICHERHEIT/ SICUREZZA / SEGURIDAD / SEGURANÇA / VEILIGHEID



EN The exhaust temperature is high during use of the equipment and remains warm even after the generator is turned off. Be careful not to touch the hot exhaust and wait for the equipment to cool down before moving it.

FR La température d'échappement est élevée pendant l'utilisation de l'équipement et reste chaude même après l'arrêt du générateur. Veillez à ne pas toucher l'échappement chaud et attendez que l'équipement refroidisse avant de le déplacer.

DE Die Abgastemperatur ist während des Betriebs des Geräts hoch und bleibt auch nach dem Ausschalten des Generators warm. Achten Sie darauf, den heißen Auspuff nicht zu berühren, und warten Sie, bis sich das Gerät abgekühlt hat, bevor Sie es bewegen.

IT La temperatura di scarico è alta durante l'uso dell'apparecchiatura e rimane calda anche dopo lo spegnimento del generatore. Fare attenzione a non toccare lo scarico caldo e attendere che l'apparecchiatura si raffreddi prima di spostarla.

ES La temperatura del escape es elevada durante el uso del equipo y se mantiene caliente incluso una vez apagado el generador. Tenga cuidado de no tocar el escape caliente y espere a que se enfríe el equipo antes de moverlo.

PT A temperatura de exaustão é alta durante o uso do equipamento e permanece quente mesmo depois que o gerador é desligado. Cuidado para não tocar no escapamento quente e aguarde o equipamento esfriar antes de movê-lo.

NL De uitlaatgastemperatuur is hoog tijdens het gebruik van de apparatuur en blijft warm, zelfs nadat de generator is uitgeschakeld. Pas op dat u de hete uitlaat niet aanraakt en wacht tot de apparatuur is afgekoeld voordat u deze verplaatst.



EN Do not smoke and avoid flames and sparks when using the generator or when filling the tank. Do not store the generator near flammable material to avoid explosion hazard.

FR Ne fumez pas et évitez les flammes et les étincelles lors de l'utilisation du générateur ou lors du remplissage du réservoir. Ne stockez pas le générateur à proximité de matériaux inflammables pour éviter tout risque d'explosion.

DE Rauchen Sie nicht und vermeiden Sie Flammen und Funken, wenn Sie den Generator verwenden oder den Tank füllen. Lagern Sie den Generator nicht in der Nähe von brennbarem Material, um Explosionsgefahr zu vermeidende

IT Non fumare ed evitare fiamme e scintille quando si utilizza il generatore o quando si riempie il serbatoio. Non conservare il generatore vicino a materiale infiammabile per evitare il rischio di esplosione.de explosión.

ES No fume y evite las llamas y chispas durante el uso del generador o durante el llenado del depósito. No almacene el generador cerca de material inflamable para evitar peligro de explosión.para este fin

PT Não fume e evite chamas e faíscas ao usar o gerador ou ao encher o tanque. Não guarde o gerador próximo a material inflamável para evitar risco de explosão.

NL Rook niet en vermijd vlammen en vonken bij gebruik van de generator of bij het vullen van de tank. Bewaar de generator niet in de buurt van brandbaar materiaal om explosiegevaar te voorkomen.

SAFETY /SÉCURITÉ / SICHERHEIT/ SICUREZZA / SEGURIDAD / SEGURANÇA / VEILIGHEID



EN **Never place the generator in an inclined or vertical position, to avoid fuel loss and equipment damage.**

FR **Ne placez jamais le générateur en position inclinée ou verticale pour éviter les fuites de carburant et les dommages à l'équipement.**

DE **Stellen Sie den Generator niemals in einer geneigten oder vertikalen Position auf, um Kraftstoffverlust und Geräteschäden zu vermeiden.**

IT **Non posizionare mai il generatore in posizione inclinata o verticale, per evitare perdite di carburante e danni alle apparecchiature.**

ES **Nunca coloque el generador en una posición inclinada o vertical, para evitar pérdidas de combustible y daños de equipo.**

PT **Nunca coloque o gerador em uma posição inclinada ou vertical, para evitar perda de combustível e danos ao equipamento.**

NL **Plaats de generator nooit schuin of verticaal om brandstofverlies en schade aan de apparatuur te voorkomen.**



EN **ALWAYS control the oil and fuel level, as well as its maintenance before each use**

FR **TOUJOURS contrôler le niveau d'huile et de carburant, ainsi que son entretien avant chaque utilisation.**

DE **Kontrollieren Sie IMMER den Öl- und Kraftstoffstand sowie die Wartung vor jedem Gebrauch.**

IT **Controllare SEMPRE il livello di olio e carburante, nonché la sua manutenzione prima di ogni utilizzo.**

ES **Controla SIEMPRE el nivel de aceite y combustible, así como sus mantenimientos antes de cada utilización.**

PT **SEMPRE controle o nível de óleo e combustível, bem como sua manutenção antes de cada uso.**

NL **Controleer ALTIJD het olie- en brandstofpeil en het onderhoud ervan voor elk gebruik**

WE APPRECIATE YOUR BUSINESS

Thank you and congratulations on choosing DeWALT.

This Operating Manual has been designed to instruct you on the correct use and operation of your DeWALT product. Your satisfaction with this product and its safe operation is our ultimate concern. Therefore please take the time to read the entire manual, especially the Safety Precautions. They will help you to avoid potential hazards that may exist when working with this product.



WARNING!

READ AND UNDERSTAND ALL SAFETY PRECAUTIONS IN THIS MANUAL BEFORE OPERATING. FAILURE TO COMPLY WITH INSTRUCTIONS IN THIS MANUAL COULD RESULT IN PERSONAL INJURY, PROPERTY DAMAGE, AND/ OR VOIDING OF YOUR WARRANTY. KAT-POWER WILL NOT BE LIABLE FOR ANY DAMAGES DUE TO FAILURE TO FOLLOW THESE INSTRUCTIONS.

⚠ Read this manual carefully before operating this generator. This manual should stay with this generator if it is sold.

CONTENTS

WE APPRECIATE YOUR BUSINESS..... 2

IMPORTANT MANUAL INFORMATION 4

IMPORTANT SAFETY INSTRUCTIONS.....6

KNOW YOUR GENERATOR 12

GENERATOR PREPARATION 14

OPERATION 18

MAINTENANCE 19

TRANSPORTATION & STORAGE 24

TROUBLESHOOTING GUIDE 25

SPECIFICATIONS 26

ELECTRICAL SCHEMATIC DIAGRAM 27

IMPORTANT MANUAL INFORMATION

Important information is distinguished in this manual by the following notes.



DANGER: *Indicates an imminently hazardous situation which, if not avoided, will result in* ***death or serious injury.***



WARNING: *Indicates a potentially hazardous situation which, if not avoided, could result in* ***death or serious injury.***



CAUTION: *Indicates a potentially hazardous situation which, if not avoided, may result in* ***minor or moderate injury.***

NOTICE: *Indicates a practice not related to personal injury which, if not avoided, may result in* ***property damage.***



Denotes risk of electric shock.



Denotes fire risk.

IMPORTANT MANUAL INFORMATION

FUEL IS HIGHLY FLAMMABLE AND POISONOUS

- Always turn off the engine when refueling.
- Never refuel while smoking or in the vicinity of an open flame.
- Take care not to spill any fuel on the engine or muffler when refueling.
- If you swallow any fuel, inhale fuel vapor, or allow any to get in your eye(s), see your doctor immediately. If any fuel spills on your skin or clothing, immediately wash with soap and water and change your clothes.
- When operating or transporting the machine, be sure it is kept upright. if it tilts, fuel may leak from the carburetor or fuel tank.

EXHAUST FUMES ARE POISONOUS

- Never operate this product in a closed area or it may cause unconsciousness and death within a short time. Always operate this product in a well ventilated outdoor area.

ENGINE AND MUFFLER MAY BE HOT

- When operating the generator place in a safe area away from pedestrians or children.
- Avoid placing any flammable materials near the exhaust outlet during operation.
- Keep the generator at least 1m(3 ft) from buildings or other equipment, or the product may overheat.
- Do not operate the product with a dust cover, or other objects covering it.
- When covering the generator, be sure to do so only after the engine and muffler have completely cooled down.
- Be sure to carry the generator only by its carrying handles.
- Do not place any obstacles on the generator.

TO PREVENT ELECTRIC SHOCK


- Never operate the product in rain or snow.
- Never touch the generator with wet hands or electrical shock can occur.

IMPORTANT SAFETY INSTRUCTIONS

CORRECT USAGE ⚠ WARNING

Example location to reduce risk of carbon monoxide poisoning


- ONLY use outside and downwind, far away from windows, doors and vents.
- Direct exhaust away from occupied spaces.

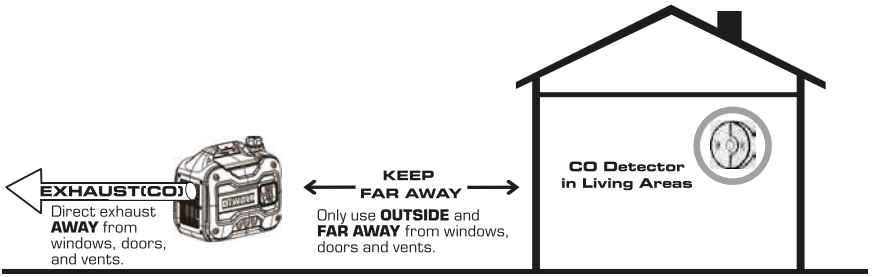

INCORRECT USAGE ⚠ WARNING

Do not operate in any of the following locations:

Near any door, window or vent
Garage
Basement
Crawl Space
Living Area
Entry Way
Porch
Mudroom

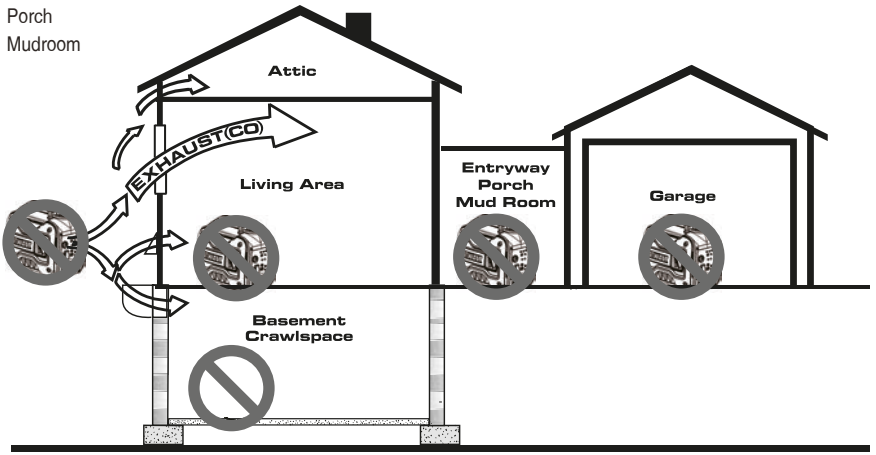

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING



Starter cord kickback (rapid retraction) will pull hand and arm toward engine faster than you can let go which could cause broken bones, fractures, bruises, or sprains resulting in serious injury.

- When starting engine, pull cord slowly until resistance is felt and then pull rapidly to avoid kickback.
- **NEVER** start or stop engine with electrical devices plugged in and turned on.

⚠ WARNING



Fuel and its vapors are extremely flammable and explosive which could cause burns, fire, or explosion resulting in death or serious injury and/or property damage.

WHEN ADDING OR DRAINING FUEL

- Turn generator engine OFF and let it cool at least 2 minutes before removing fuel cap. Loosen cap slowly to relieve pressure in tank.
- Fill or drain fuel tank outdoors.
- **DO NOT** overfill tank. Allow space for fuel expansion.
- If fuel spills, wait until it evaporates before starting engine.
- Keep fuel away from sparks, open flames.
- Check fuel lines, tank, cap, and fittings.
- **DO NOT** light a cigarette or smoke.

WHEN STARTING EQUIPMENT

- Ensure spark plug, muffler, fuel cap, and air cleaner are in place.
- **DO NOT** crank engine with spark plug removed.



Read Owner's Manual before operation.



You CAN be KILLED or SERIOUSLY INJURED if you don't follow instructions.

WHEN OPERATING EQUIPMENT

- **DO NOT** operate this product inside any building, carport, porch, mobile equipment, marine applications, or enclosure.
- **DO NOT** tip engine or equipment at angle which causes fuel to spill.
- **DO NOT** stop engine by moving choke control to "Start" position.

WHEN TRANSPORTING, MOVING OR REPAIRING EQUIPMENT

- Transport/move/repair with fuel tank EMPTY or with fuel shutoff valve OFF.
- **DO NOT** tip engine or equipment at angle which cause fuel to spill.
- Disconnect spark plug wire.

WHEN STORING FUEL OR EQUIPMENT WITH FUEL IN TANK

- Store away from furnaces, stoves, water heaters, clothes dryers, or other applications that have pilot light or other ignition source because they could ignite fuel vapors.

⚠ WARNING



A hot exhaust system can cause serious burns, avoid contact if the engine has been running.

⚠ WARNING



Generator voltage could cause electrical shock or burn resulting in death or serious injury.

- Use approved transfer equipment, suitable for the intended use, to prevent backfeed by isolating generator from electric utility workers.

IMPORTANT SAFETY INSTRUCTIONS

- When using generator for backup power, notify utility company.
- Use a ground fault circuit interrupter (GFCI) in any damp or highly conductive area, such as metal decking or steel work.
- **DO NOT** touch bare wire or receptacles.
- **DO NOT** use generator with electrical cords which are worn, frayed, bare or otherwise damaged.
- **DO NOT** operate generator in the rain or wet weather.
- **DO NOT** handle generator or electrical cords while standing in water, while barefoot, or while hands or feet are wet.
- **DO NOT** allow unqualified persons or children to operate or service generator.

⚠ WARNING



Exhaust heat/gases could ignite combustibles, structures or damage fuel tank causing a fire, resulting in death or serious injury and/or property damage. Contact with muffler area could cause burns resulting in serious injury.

- **DO NOT** touch hot parts and **AVOID** hot exhaust gases.
- Allow equipment to cool before touching.
- Replacement parts must be the same and installed in the same position as the original parts.

⚠ WARNING



Produce sparking near the generator could cause fire or electric shock resulting in death or serious injury

WHEN ADJUSTING OR MAKING REPAIRS TO YOUR GENERATOR

- Disconnect the spark plug wire from the spark plug and place the wire where it cannot contact spark plug.

WHEN TESTING FOR ENGINE SPARK

- Use approved spark plug tester.
- **DO NOT** check for spark with spark plug removed.

⚠ WARNING



Starter and other rotating parts could entangle hands, hair, clothing, or accessories resulting in serious injury.

- **NEVER** operate generator without protective housing or covers.
- **DO NOT** twear loose clothing, jewelry or anything that could be caught in the starter or other rotating parts.
- Tie up long hair and remove jewelry.

⚠ WARNING

Excessively high operating speed could result in minor injury. Excessively low operating speed impose a heavy load.

- **DO NOT** tamper with governors spring, link or other parts to increase engine speed. Generator supplies correct rated frequency and voltage when running at governed speed.
- **DO NOT** modify generator in any way.

NOTE:

Exceeding generator wattage/amperage capacity could damage generator and/or electric devices connected to it.

- **DO NOT** exceed the generator's wattage amperage capacity.
- Start generator and let engine stabilize before connecting electrical loads.
- Connect electrical loads in OFF positions, then turn ON for operation.
- Turn electrical load OFF and disconnect from generator before stopping generator.

IMPORTANT SAFETY INSTRUCTIONS

NOTE:

Improper treatment of generator could damage it and shorten its life.

- Use generator only for intended uses.
- If you have questions about intended use, ask dealer or contact local service center.
- Operate generator only on level surfaces.
- **DO NOT** expose generator to excessive moisture, dust, dirt, or corrosive vapors.
- **DO NOT** insert any objects through cooling slots.
- If connected devices overheat, turn them off and disconnect them from generator.
- Shut of generator if:
  - Electrical output is lost.
  - Equipment sparks, smokes, or emits flames.
  - Unit vibrates excessively

⚠ WARNING

Medical and Life Support Uses.

- In case of emergency, call local police.
- NEVER use this product to power life support devices or life support appliances.
- NEVER use this product to power medical devices or medical appliances.
- Inform your electrical provider immediately if you or anyone in your household depends on electrical equipment to live.
- Inform your electrical provider immediately if a loss of power would cause you or anyone in your household to experience a medical emergency.

⚠ WARNING:

When this generator is used to supply a building wiring system:
generator must be installed by a qualified electrician and connected to a transfer switch as a separately derived system. The generator shall be connected through a transfer switch that switches all conductors other than the equipment grounding conductor. The frame of the generator shall be connected to an approved grounding electrode. Failure to isolate the generator from power utility can result in death or injury to electric utility workers.

- Do not use this generator to provide power for emergency medical equipment or life support devices.
- Exhaust contains poisonous carbon monoxide, a colorless,odorless gas. Breathing exhaust can cause loss of consciousness and can lead to death. If running in a confined or partiall-enclosed area, the air may contain a dangerous amount or carbon monoxide. To keep exhaust fumes from building up, always provide adequate ventilation.
- Always use a battery-powered carbon monoxide detector when running the generator. IF you begin to feel sick, dizzy, or weak while using the generator, shut it off and get to fresh air immediately. See a doctor. You may have carbon monoxide poisoning.
- Place the generator on a flat, stable surface with a slope of no more than 4°.
- Operate outdoors in a well-ventilated, well-lit area isolated from working areas to avoid noise interference.
- Operating the generator in wet conditions could result in electrocution. Keep the unit dry. Keep the generator a minimum of 3 feet / 1 meter away from all types of combustible material.
- Do not operate generator near hazardous material.
- Do not operate generator at a gas or natural gas filling station.
- Do not touch the muffler or cylinder during or immediately after use; they are HOT and will cause burn injury.
- This generator has a neutral floating condition. This means the neutral conductor is not electrically connected to the frame of the machine. Do not allow the generator' s gas tank to overflow when filling. Fill to 1 inch / 25mm. Below the top neckof the gasoline tank to allow for fuel expansion. Do not cover the fuel tank cap when the engine is running. Covering the fuel tank cap during use may cause engine failure and/or damage to the tool.

IMPORTANT SAFETY INSTRUCTIONS

- Do not smoke when filling the generator with gasoline.
- Shut down the engine and allow to cool completely before adding gasoline or lubricant to the generator.
- Do not remove the oil dipstick or the fuel tank cap when the engine is running.
- Pay close attention to all safety labels located on the generator.
- Keep children a minimum of 10 feet/ 3 meters away from the generator at all times.
- The unit operates best in temperatures between 23ºF/-2ºC and 104ºF/40ºC with a relative humidity of 90% or less.
- Operating voltage and frequency requirement of all electronic equipment should be checked prior to plugging them into this generator. Damage may result if the equipment is not designed to operate within a +/- 10% voltage variation, and +/- 3 hz frequency variation from the generator name plate ratings.
- For outdoor use only.
- Save these instructions. Refer to them frequently and use them to instruct others who may use this product. If you loan someone this product, loan them these instructions also.

SIGNAL DESCRIPTION

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SIGNAL	MEANING
DANGER:	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
WARNING:	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
CAUTION:	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
NOTICE:	(Without Safety Alert Symbol) Indicates important information not related to an injury hazard, such as a situation that may result in property damage.

IMPORTANT SAFETY INSTRUCTIONS

GROUNDING



Properly ground generator to prevent electric shock.

- Connect the ground terminal of the generator to the ground electrode buried in the ground.

WARNING NOTES

- Failure to properly ground the generator can result in electric shock.
- Be sure to always comply with electric loads.

CONNECTION

WARNING


Before the generator can be connected to a building's electrical system , a licensed electrician must install an isolation (transfer)switch in the building's main fuse box. The switch is the connection point for generator power and allows selection of generator or main line power to the building .This will prevent the generator from charging the main power line (back feeding)when the main power supply has failed or has been turned off for line repair. back-feeding can electrocute or injure line maintenance personnel. Also, generator and building electrical system damage can occur when normal operating power returns if unit is used without an auto-switch.


DANGER

Always use proper approved electrical cords. Besure to comply with all electric codes.
Do not use electrical cords that are worn or damaged.
Always use GFCI(ground fault circuit interuptor) for damp locations.
Always use proper approved transfer switch to isolate generator from the electric panel.

KNOW YOUR GENERATOR

1. Description

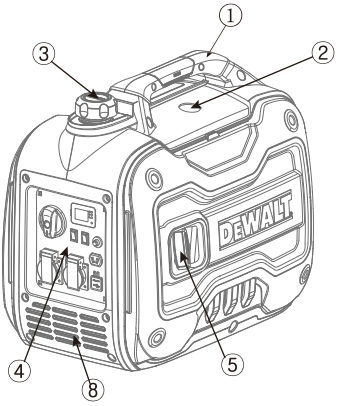


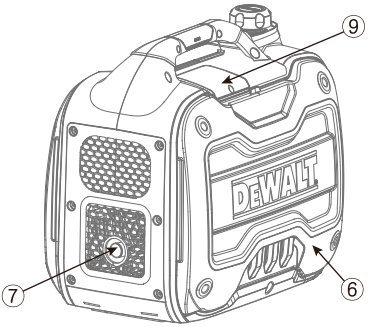

① Carrying handle
② Fuel gauge
③ Fuel tank cap
④ Control panel
⑤ Recoil starter
⑥ Oil filler cover
⑦ Muffler
⑧ Cooling air inlet
⑨ Spark plug cap window

---

2. Control Panel

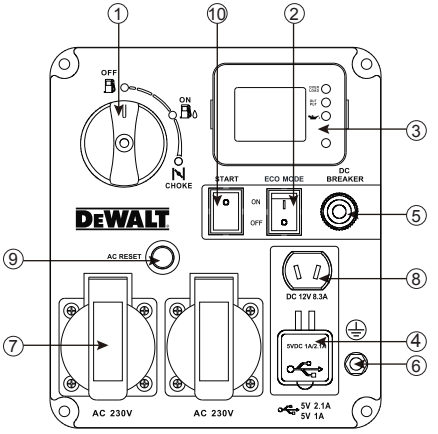

① Multi-switch
② Eco mode switch
③ Status indicator
④ USB port
⑤ DC protector
⑥ Ground terminal
⑦ AC receptacle
⑧ DC receptacle
⑨ AC reset
⑩ Start


KNOW YOUR GENERATOR

3. Control Function

3.1 Engine Smart Control (ECO)

"ON"

When the ECO switch is turned to "ON", the throttle controls the engine speed according to the connected load. The results are better fuel consumption and less noise.



"OFF"


When the ECO switch is turned to"OFF", the engine runs at the rated(3600r/min) regard-less of whether is a load connected or not.

NOTICE:

The ECO must be turned to"OFF"when using electric devices that require a large starting electric current.


3.2 Output Indicator(Green)

The output indicator comes on when the engine starts and produces power.

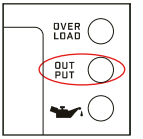

3.3 Overload Alarm(Red)


The overload alarm comes on when a connected device requires more power than the generator is able to produce. THe output indicator(Green) will go off and the overload alarm(Red) will stay on, but the engine will continue to run.

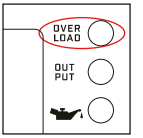

CAUTION: Do not overload the generator


3.4 Low Oil Alarm(Red)

When the oil level falls below the required level the low oil alarm will come on and the engine stops automatically. The engine will not restart until oil is added to the unit to bring it up to the appropriate level.

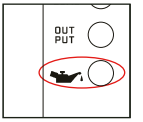


3.5 Switch

Press once, you can switch the display;
long press more than 3 seconds, you can switch the single time and cumulative time.

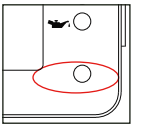

3.6 Multi-Switch

The multi-switch control fuel valve, choke and engine switch. When starting the generator, rotate the multi-switch clockwise from OFF to CHOKE position,the pull recoil cord quickly to start. After started, rotate the switch to ON position.

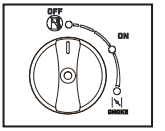


NOTICE:

The choke"⛽" is not required to start a warm engine.

3.7 Ground Terminal

Properly ground generator to prevent electrical shock. Connect the ground terminal of generator to ground electrode buried in the ground.



GENERATOR PREPARATION

BEFORE STARTING THE INVERTER



BEFORE STARTING THE INVERTER, REVIEW SAFETY SECTION STARTING ON PAGE 5.

Location Selection – Before starting the inverter, avoid exhaust and location hazards by verifying:

- You have selected a location to operate the inverter that is outdoors and well ventilated.
- You have selected a location with a level and solid surface on which to place the inverter.
- You have selected a location that is at least 6 feet (1.8 m) away from any building, other equipment or combustible material.
- If the inverter is located close to a building, make sure it is not located near any windows, doors and/ or vents.

⚠DANGER

Using a generator indoors
CAN KILL YOU IN MINUTES.
Generator exhaust contains carbon monoxide.
This is a poison you cannot see or smell.



NEVER use inside a home or garage, **EVEN IF** doors and windows are open.



Only use **OUTSIDE** and far away from windows, doors, and vents.

Avoid other generator hazards.
READ MANUAL BEFORE USE.

⚠ WARNING



Always operate the inverter on a level surface. Placing the inverter on non level surfaces can cause the inverter to tip over, causing fuel and oil to spill. Spilled fuel can ignite if it comes in contact with an ignition source such as a very hot surface.

NOTICE

Only operate the inverter on a solid, level surface. Operating the inverter on a surface with loose material such as sand or grass clippings can cause debris to be ingested by the inverter that could:
• Block cooling vents
• Block air intake system

Weather – Never operate your inverter outdoors during rain, snow or any combination of weather conditions that could lead to moisture collecting on, in or around the generator.

Dry Surface – Always operate the inverter on a dry surface free of any moisture.

No Connected Loads – Make sure the inverter has no connected loads before starting it. To ensure there are no connected loads, unplug any electrical extension cords that are plugged into the control panel receptacles.

NOTICE

Starting the inverter with loads already applied to it could result in damage to any appliance being powered off the inverter during the brief start-up period.

Grounding the Inverters
Consult with your local municipalities for your grounding codes.

⚠ WARNING



Be sure the inverter is properly connected to earth ground before operating.

The following section describes the necessary steps to prepare the generator for use. Failure to perform these steps properly can damage the generator or shorten its life.


STEP 1 - ADD/CHECK OIL

The generator is shipped without oil. User must add the proper amount of oil before operating the generator for the first time. The oil capacity of the engine crankcase is **0.45L (SAE 10W-30).**

To add oil, follow these steps:


1. Place the generator on a level surface. Make sure the engine is OFF before adding or checking oil.

CAUTION: Keep the generator level! Tilting the generator to assist in filling will cause oil to flow into the wrong areas of the engine and cause damage.

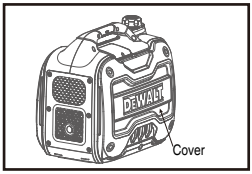


2. Remove the oil filler cover. Unscrew the oil dipstick from the engine.


GENERATOR PREPARATION

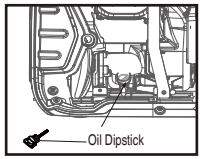

3. Using an oil funnel or appropriate dispenser, slowly add oil into the oil fill, being careful not to overfill the unit. Fill the crankcase to the upper fill line so you can visually see the oil coming halfway up the oil fill threads.
4. Reinstall the oil dipstick and firmly tighten it. Wipe clean any spilled oil.
5. Reinstall the oil filler cover.

NOTE: Used engine oil should be disposed of at an approved disposal site. See local retailer for more information.

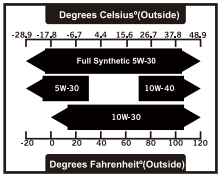

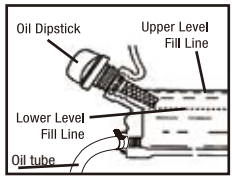

For subsequent operation, the oil level should be checked before each use, or after every 8 hours of operation The generator is equipped with a low-oil sensor and will NOT start without a sufficient amount of oil.

To check oil level (before every subsequent start):

1. Place the generator on a level surface. Make sure the engine is OFF before adding or checking oil.
2. Open the oil filler cover. Remove and wipe the dipstick with a clean rag.
3. Insert the dipstick into the oil fill without screwing it in. Remove the dipstick to check the oil mark .

If the oil mark covers less than one half of the dipstick, slowly add oil until you can see the oil coming halfway up the oil fill threads.

4. Wipe clean any oil leaks and firmly tighten the dipstick. Reinstall the oil filler cover.

STEP 2 - ADD/CHECK FUEL

⚠ **GASOLINE WARNING:** Keep generator away from open flame. This generator may emit highly flammable and explosive gasoline vapors, which can cause severe burns or even death if ignited. A nearby open flame can lead to explosion even if not directly in contact with gasoline

- Do not operate near open flame, heat, or any other ignition source.
- Do not smoke near the generator.

- Always operate on a firm, level surface.
- Always turn generator off before refueling. Allow generator to cool for at least 2 minutes before re moving the fuel cap. Loosen cap slowly to relieve pressure in tank.
- Do not overfill fuel tank. Fuel may expand during operation. Do not fill to the top of the tank. Allow for expansion.
- Always check for spilled fuel before operating. Clean up any spilled fuel before starting.
- Empty fuel tank before storing or transporting the generator to prevent spilling.

Use ONLY fresh (within 30 days from purchase), lead-free gasoline with a **minimum of 87 octane rating.** The generator performs best with ethanol-free gasoline. DO NOT use gasoline with over 10% ethanol.The capacity of the fuel tank is **8.0 L** DO NOT mix oil with gasoline.

NOTICE:

- Never use an oil/gasoline mixture.
- Never use old gasoline.
- Avoid getting dirt or water into the fuel tank.
- Gasoline can age in the tank and make starting difficult. Never store generator for more than 2 months with fuel in the tank.
- Keep gasoline away from sparks, open flames, pilot lights, heat and other sources of ignition.

GENERATOR PREPARATION


To add gasoline, follow these steps:

1. Make sure the generator is shut OFF and on a level surface. Unscrew the fuel cap and set it aside. The fuel cap may be tight and hard to unscrew.

2. Slowly add unleaded gasoline to the fuel tank. Be careful not to overfill.


NOTE: Do not fill the fuel tank to the very top. If you do so, gasoline will expand and spill during use, even with the fuel cap in place

3. Reinstall fuel cap and wipe clean any spilled gasoline with a dry cloth.

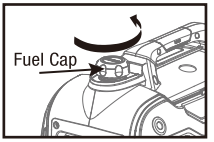

To check fuel level:

Check the fuel guage for fuel level. If the fuel level is low, refill the fuel tank before starting your generator for the next time.

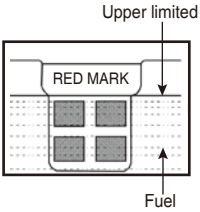

STEP 3 - CONNECT THE BATTERY (ELECTRIC)

⚠ **WARNING:** BATTERY GIVES OFF EXPLOSIVE HYDROGEN GAS.


- Keep battery away from sparks, cigarettes, or other sources of flame.
- Do not connect or disconnect battery while generator is running.
- Service or use battery only in well ventilated areas.

⚠ **WARNING:** Battery contains sulfuric acid. Battery acid is poisonous. Tilting the generator with the battery installed can cause battery acid to spill.

- Wear protective clothing and eye wear when servicing battery.
- Keep out of reach of children.
- If battery acid gets on your skin, wash with water immediately.
- If battery acid gets in your eyes, flush with water for at least 15 minutes and call a doctor immediately.

If battery acid is swallowed, call a doctor immediately. Drink a large amount of water or milk. Then drink milk of magnesia or vegetable oil.


The generator is shipped with the lithium-ion battery's negative (-) terminal disconnected to maximize safety. To start the generator using electric start, the battery must be connected.

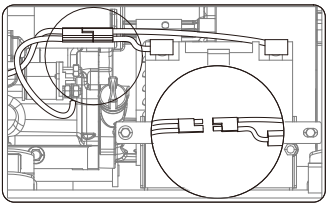

To connect the battery:


1. Remove the access cover from the back panel.
2. Connect the wire connecter.
3. Reinstall and secure the battery access cover.

NOTICE: If you do not plan to use the generator for a long period of time, we recommend to DISCONNECT the negative battery ca ble from the battery to protect the battery from losing charge. After disconnecting the cable, cover the free end with an insulator such as electrical tape. You may also choose to use a trickle charger (not included) to maintain battery charge.

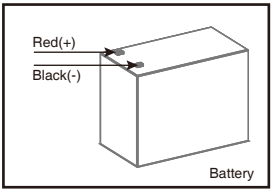

GENERATOR PREPARATION

STEP 4 - GROUND THE GENERATOR

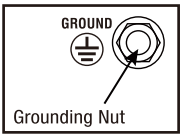

To reduce the risk of electric shock and to maximize safety, the generator should be properly grounded.

Ground the generator by tightening the grounding nut on the front control panel against a grounding wire.

This grounding wire should be connected at the other end to a copper, brass, or steel grounding rod that is driven into the earth. Wire and grounding rods are not included with the generator.

NOTE: Grounding codes can vary by location. Contact a local electrician to check the area codes.

⚠ **WARNING:** Failure to properly ground the generator increases your risk of electric shock.

HIGH ALTITUDE OPERATION ABOVE 914 METER

The fuel system on this generator may be affected by operation at high altitudes. Proper operation can be ensured by installing an altitude kit at altitudes higher than 914 meter above sea level. At elevations above 2438 meter, the engine may experience a decrease in performance, even with the proper altitude kit. Operating this generator without said kit may increase the engine's emissions and decrease both fuel economy and performance. Please contact your authorized service center for important information regarding these modifications.

Before starting the generator, make sure you have read and performed the steps in the "Generator Preparation" section of this manual. If you are unsure about how to perform any of the steps in this manual Please contact your authorized service center

⚠ DANGER: CARBON MONOXIDE

Using a generator indoors **CAN KILL YOU IN MINUTES.** Generator exhaust contains carbon monoxide (CO). This is a poison gas you cannot see or smell. If you can smell the generator exhaust, you are breathing CO. But even if you cannot smell the exhaust, you could be breathing CO.

NEVER use a generator inside homes, garages, crawl spaces, or other partially enclosed areas. Deadly levels of carbon monoxide can build up in these areas. Using a fan or opening windows and doors does NOT supply enough fresh air. ONLY use a generator OUTSIDE and far away from windows, doors, and vents. These openings can pull in generator exhaust.

Even if you use a generator correctly, CO may leak into the home. ALWAYS use a battery-powered or battery-backup CO alarm in the home. If you start to feel sick, dizzy, or weak after the generator has been running, move to fresh air RIGHT AWAY. See a doctor. You may have carbon monoxide poisoning.

⚠ **WARNING:** DO NOT operate generator near open flame or flammable materials This generator may emit highly flammable and explosive gasoline vapors, which can cause severe burns or even death if ignited. A nearby open flame can lead to explosion even if it isn't directly in contact with gasoline. Do not smoke near the generator.

⚠ **WARNING:** This generator produces powerful voltage, which can result in electrocution.

⚠ **WARNING:** Do not use in rainy or wet conditions. Do not touch bare wires or receptacles (outlets). Do not allow children or non-qualified persons to operate.

⚠ **WARNING:** Generator should ONLY be connected to electrical devices, either directly or with an extension cord. NEVER CONNECT TO A BUILDING ELECTRICAL SYSTEM without a qualified electrician and connected to a transfer switch as a separately derived system. Such connections must comply with local electrical laws and codes. Failure to comply can create a back-feed, which may result in serious injury or death to utility workers.

To maximize safety, ALWAYS ground the generator before using it (see the "GROUND THE GENERATOR")
Use a ground fault circuit interrupter in highly conductive areas such as metal decking or steel work. These are available in-line with some extension cords.


CAUTION: Disconnect all electrical loads from the generator before attempting to start.

OPERATION


1. Before starting the generator:

- Verify that the generator is outside on a dry, level surface. Allow at least two feet of clearance on all sides of the generator.
- To maximize safety, check that the generator is properly grounded (see “GROUND THE GENERATOR”).
- Check there is sufficient level of oil in the crankcase. Add oil if necessary (see “ADD/CHECK OIL”).
- Make sure there is sufficient level of gasoline in the fuel tank. Add fuel if necessary (see “ADD/CHECK FUEL”).
- Make sure all electrical devices are unplugged from the generator during ignition. Otherwise it will be difficult for the engine to start.

1.1 Turn theulti- switch to “CHOKE” position.



1.2 Turn the ECO throttle to the “ON” position.




Manual start:

1.3 Place one hand on the generator to hold it place, and pull on the recoil starter handle slowly until a slight resistance is felt. Then pull quickly o start the engine. Returncord tgently into the machine. Never allow the cord to snap back.



Electrical start:

1.3 Hold down the ENGINE START switch for 1-2 seconds.

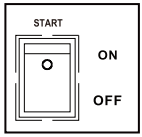

NOTE: If you have repeated failed attempts to start the engine, please consult the troubleshooting guide Allow the generator to run for several minutes before attempting to connect any electrical devices. This allows the generator to stabilize its speed and temperature.

2. Shutting off the generator


⚠ **CAUTION:** Unplugging running devices can cause damage to the generator. Never stop the engine with electrical devices connected and running.

2.1 Turn off all electrical devices prior to unplugging them from the generator. Unplugging running devices can cause damage to the generator.

2.2 Allow generator to run at no load for a few minutes to stabilize internal temperatures.

2.3 Press the ENGINE START/STOP button to stop the engine.

2.4 Turn the Multi-switch to the “OFF” position to shut down the engine and fuel.

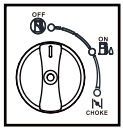

⚠ **WARNING:** Allow the generator to cool down before touching areas that become hot during use.

CAUTION: Allowing gasoline to sit in the fuel tank for long periods of time can make it difficult to start the generator in the future. NEVER store the generator for extended periods of time (over 2 months) with fuel in the fuel tank. Refer to “STORING THE GENERATOR”.

3. Connection Electrical Loads

3.1 Let the engine stabilize and warm up a few minutes after starting.
3.2 Prior to powering tools and equipment, make sure the generator’s rated voltage, and amperate capacity is adequate to supply all electrical loads that the unit will power. If powering exceeds the generator’s capacity, it may be necessary to group one or more of the tools and/or equipment for connection to a separate generator.
3.3 DO NOT connect 3-phase loads to the generator.
3.4 DO NOT overload the generator.

MAINTENANCE



BEFORE PERFORMING MAINTENANCE ON THE INVERTER, REVIEW THE SAFETY SECTION STARTING ON PAGE 5, AS WELL AS THE FOLLOWING SAFETY MESSAGES.

⚠ WARNING



Avoid accidentally starting the inverter during maintenance by removing the spark plug boot from the spark plug. For electric start inverters, also disconnect the battery cables from the battery (disconnect the black negative (-) cable first) and place the cables away from the battery posts to avoid arcing.



Allow hot components to cool to the touch prior to performing any maintenance procedure.



Internal pressure can build in the engine crankcase while the engine is running. Removing the oil fill plug/dipstick while the engine is hot can cause extremely hot oil to spray out of the crankcase and can severely burn skin. Allow engine oil to cool for several minutes before removing the oil fill plug/dipstick.



Always perform maintenance in a well-ventilated area. Gasoline fuel and fuel vapors are extremely flammable and can ignite under certain conditions.

⚠ CAUTION



Avoid skin contact with engine oil or gasoline. Prolonged skin contact with engine oil or gasoline can be harmful. Frequent and prolonged contact with engine oil may cause skin cancer. Take protective measures and wear protective clothing and equipment. Wash all exposed skin with soap and water.

⚠ WARNING



Failure to perform periodic maintenance or not following maintenance procedures can cause the inverter to malfunction and could result in death or serious injury.

NOTICE

Periodic maintenance intervals vary depending on inverter operating conditions. Operating the inverter under severe conditions, such as sustained high-load, high-temperature, or unusually wet or dusty environments, will require more frequent periodic maintenance. The intervals listed in the maintenance schedule should be treated only as a general guideline.

Following the maintenance schedule is important to keep the inverter in good operating condition. The following is a summary of maintenance items by periodic maintenance intervals.

Recommended Maintenance Schedule		Every 8 hours or daily	Every 25 hours	Every 3 months or 50 hours	Every 6 months or 100 hours	Before Storage	As necessary
Engine Oil	Check level	x					
	Replace		x*			x	x
Air Filter	Check			x*			
	Clean			x*			
Spark Plug	Check/clean/ regap				x		
	Change					x	x
Fuel Tank	Check level	x					
	Drain					x	x
Carburetor (Auto Shutoff)	Drain					x	x
Carburetor (Manual Shutoff)						x	
Spark Arrestor	Check/Clean				x		
Battery	Disconnect					x	

* Clean/change more often under dusty conditions or operating under heavy load.

MAINTENANCE

IMPORTANT GENERATOR MAINTENANCE TIPS:

- Drain your carburetor before storage to prevent it from clogging.
- Do not store the generator with fuel inside the tank for more than 2 months - the fuel will go bad.
- Run the generator for at least 20 minutes every month to charge the battery and maximize the generator's lifespan.

NOTE: Failure to properly maintain the generator will void the warranty.

AIR FILTER MAINTENANCE

Check every 50 hours of operation (refer to Recommended Maintenance Schedule).
Routine maintenance of the air filter helps maintain proper airflow to the carburetor. Occasionally check that the air cleaner is free of excessive dirt.

To inspect and clean the air filter:


1. Unscrew the maintenance cover bolts, and remove the cover from the side panel.

2. Take the cover off of the air cleaner. Remove the sponge-like air filter element from the casing. Wipe excessive oil and any dirt from inside of the air filter casing.


3. Check and clean the foam air filter element. Good elements can be washed in soapy water. Dry the element in clean cloth (do not twist it). Add a few drops of engine oil to the air filter element and spread it evenly.

If the air filter element has been damaged, replace it with a new one. Please contact your authorized service center.

4. Reinstall the air filter element, air filter cover and maintenance cover.

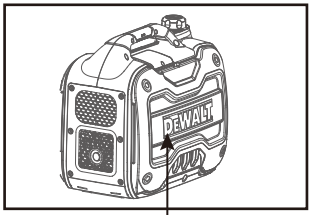

Cover

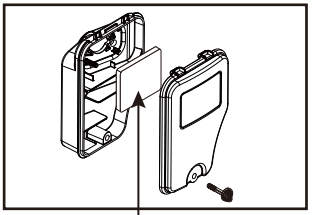

Air filter elements

⚠ **WARNING:** Running the engine with a dirty, damaged or missing air filter element can result in danger to the operator and cause the engine to wear out prematurely.

MAINTENANCE

SPARK PLUG MAINTENANCE


Refer to Recommended Maintenance Schedule for maintaining the spark plug.


The spark plug must be properly gapped and free of deposits in order to ensure proper engine operation. If the engine is hot, allow it to cool before servicing the spark plug.

To inspect or replace the spark plug:

1. Unscrew the maintenance cover bolt, and remove the cover from the side panel. Remove the spark plug hole cover.
2. Remove the spark plug cap
3. Use the included spark plug wrench to unscrew and then carefully remove the spark plug from the engine.


TIP: There is limited space for the wrench to turn. Use both of holes in the spark plug wrench to disassemble the spark plug.

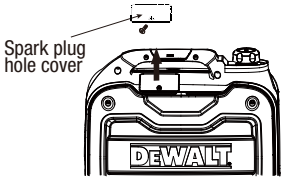

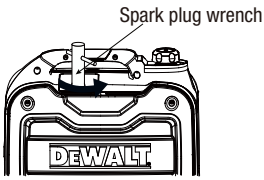

4. Visually inspect the spark plug. If it is cracked or chipped, or if the electrodes are worn or burned, discard it and replace with a new spark plug.

5. If re-using the spark plug, use a wire brush to clean any dirt from around the spark plug base, then re-gap the spark plug.

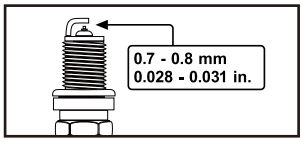

6. Measure the plug gap with a spark plug gap gauge. The gap should be 0.7 - 0.8 mm (0.028 - 0.031 in)

7. Screw the spark plug back into the spark plug hole using the spark plug wrench. Do not over-tighten spark plug. Recommended tightening of spark plug is ½ to ¾ of a turn (15 ft-lb torque/20.33 Nm) after spark plug gasket contacts spark plug hole.

8. Reinstall the spark plug cap and maintenance cover.

SPARK ARRESTOR MAINTENANCE

Inspect and clean the spark arrestor every 100 hours of operation.


The spark arrester is located outside the muffler, which gets very hot during operation. Allow the engine to cool completely before servicing the spark arrester. To inspect and clean the spark arrester:

1. Remove the two screws, and remove the tail pipe and spark arrester.

2. Use a brush to remove carbon deposits from the spark arrester screen. Be careful to avoid damaging the screen.

The spark arrester must be free of breaks and tears. Replace the spark arrester if it is damaged.

3.Install the spark arrester in the reverse order of removal.

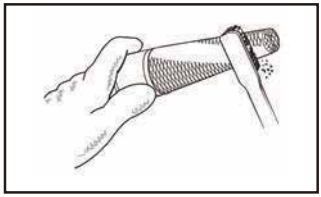

MAINTENANCE

DRAINING THE FUEL TANK / CARBURETOR


To help prevent gum deposits in the fuel system, drain the fuel from the tank and carburetor before storing.

1. With the help of another person, place the generator on an elevated platform such as a table or desk.

2. Unscrew the maintenance cover bolts, and remove the cover from the side panel.


To draining fuel tank:
3.1 Make sure that the multi-switch to turned to "ON".

To draining carburetor:
3.2 Make sure that the multi-switch to turned to "OFF", at this position, the fuel valve is turned OFF so that only the fuel left inside the carburetor will be drained out.

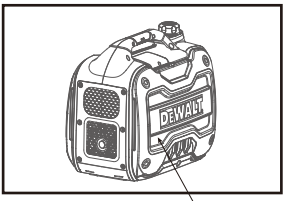

Maintenance Cover

4. The carburetor can be accessed between the engine and the air filter. Locate the transparent tube from the carburetor that extends down through the base plate of the generator.

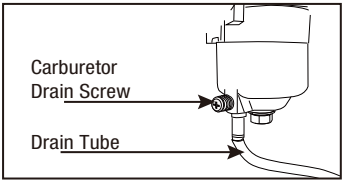

5. Prepare an approved gasoline-storage container and direct the end of the drain tube into the container.

6. Open up the carburetor drain screw with a flat-head screwdriver (not included) and drain out any gasoline that has built up inside the carburetor through the drain tube into the approved gasoline-storage container.

7. Once the fuel has drained, tighten the drain screw with the screwdriver.

NOTE: Make sure to drain your carburetor before storing the generator for long periods of time.

8. Reinstall the service panel.

MAINTENANCE

DRAINING/CHANGING OIL


Change the oil according to the Recommended Maintenance Schedule.


Change the oil MORE OFTEN if operating under heavy load or high ambient temperatures. It is also necessary to drain the oil from the crankcase if it has become contaminated with water or dirt. Changing the oil when the engine is warm allows for complete drainage.

To change engine oil:

1. With the help of another person, place the generator on an elevated platform such as table or workbench.

NOTE: To avoid possible fuel spills from the carburetor bowl, drain the carburetor before draining oil.

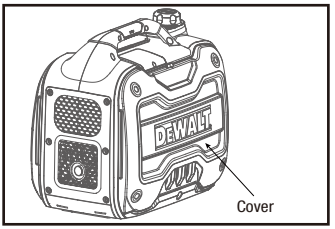

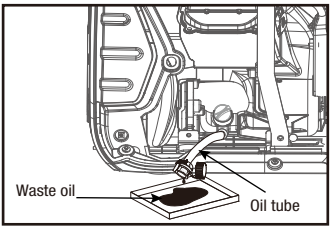

2. Unscrew the oil side cover bolts, and remove the cover from the side panel.


3. Place a suitable container underneath the generator to catch the used oil.


4. Remove the oil tube to allow the oil drain completely.

NOTE: Never dispose of used engine oil in the trash or down a drain. Please call a local recycling center or auto garage to arrange proper oil disposal.

5. With the generator in a level position and refill with engine oil following the instructions in the Checking/Adding engine oil section previously in this manual.

6. Reinstall the oil dipstick and tighten it securely. Wipe clean any oil spillage and reinstall the oil access cover.

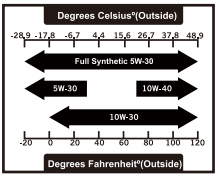

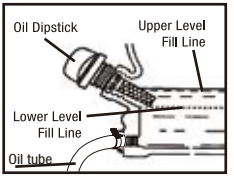

NOTE: SAE 10W-30 is recommended for general use. Other viscosities shown in the chart may be used when the average temperature in your area is within the indicated range.

TRANSPORTATION & STORAGE

⚠ WARNING



Before attempting to service or troubleshoot the generator, the owner or service technician must first read the owner's manual and understand and follow all safety instructions. Failure to follow all instructions may result in conditions that can lead to voiding of the EPA certification or product warranty, serious personal injury, property damage or even death.

TRANSPORTING THE GENERATOR

To prevent fuel spillage when transporting, be sure to perform the following:

1. Tighten the fuel cap.
2. Set the engine switch to "OFF".
3. Drain the fuel tank if possible.
4. Keep the generator upright. Never place the generator on its side or upside down - doing so will make it difficult to start.

⚠ **WARNING:** Avoid direct sunlight inside a vehicle. If the generator is left in an enclosed vehicle for many hours, the high temperature could cause the fuel to vaporize and result in a possible explosion.

STORING THE GENERATOR

Shut off the generator and allow the unit to cool to room temperature before storing it. NEVER place any type of storage cover on the generator while it is still hot. Do not obstruct any ventilation openings.

Follow the procedures below for properly storing your generator. We highly recommend running your generator once a month for 20 to 30 minutes. Plug in a small load in to ensure there is proper power output.

For Short Periods (30 to 60 Days):	**For Extended Periods (Over 60 Days):**
• Drain the carburetor. • Disconnect the negative lead from the battery. • **Add fuel stabilizer:** Follow the suggested portions and instructions of your preferred stabilizer. Run the engine for 15 to 20 minutes, allowing the fuel stabilizer to mix with the gasoline and circulate through the carburetor, and then top off with fuel. Filling the fuel tank full reduces the amount of air in the tank and helps fight deterioration of fuel.	• Disconnect the negative lead from the battery. • Drain the fuel tank and carburetor (see "DRAINING THE FUEL TANK"). NEVER store generator with fuel in the tank for more than two months. • Change the engine oil (see "CHANGING OIL").

⚠ **WARNING:** Store the generator upright in a cool and dry location, away from sources of heat, open flames, sparks or pilot lights.

PRODUCT DISPOSAL

Do not dispose of used generator or parts with your household waste. This product contains electrical or electronic components that should be recycled. Please take this product to your local recycling facility for responsible disposal to minimize its environmental impact.

Do not dispose of used oil or fuel in the trash or down a drain. Please contact your local recycling center or auto garage to arrange proper oil/fuel disposal.

TROUBLESHOOTING GUIDE

⚠ WARNING



Before attempting to service or troubleshoot the generator, the owner or service technician must first read the owner's manual and understand and follow all safety instructions. Failure to follow all instructions may result in conditions that can lead to voiding of the EPA certification or product warranty, serious personal injury, property damage or even death.

ENGINE WILL NOT START

Possible Cause	Solution
Battery not charged.	Charge battery.
No fuel.	Fill fuel tank.
Stale gasoline or water in gasoline.	Drain entire system and refill with fresh fuel.
Engine oil level is low.	Engine is equipped with Low Oil Shutoff. If engine oil level is low, it must be filled before unit will start. Check engine oil level and fill, if necessary.
Spark plug faulty, fouled, or improperly gapped.	Replace spark plug.
Engine stored without treating or draining gasoline, or refueled with bad gasoline.	Drain fuel. Refuel with fresh gasoline.

ENGINE LACKS POWER.

Possible Cause	Solution
Dirty air filter.	Check air filter element. Clean or replace as needed.
Engine stored without treating or draining gasoline, or refueled with bad gasoline.	Drain fuel. Refuel with fresh gasoline. If problem continues, contact a qualified service center.

AC RECEPTACLE DOES NOT WORK.


Possible Cause	Solution
OUTPUT indicator is OFF, and OVERLOAD indicator is ON.	Check AC load. Stop and restart the engine. Check the cooling air inlet. Stop and restart the engine.
AC Circuit protector(s) tripped.	Check AC load and reset AC circuit protector(s)
Item plugged in is defective.	Try a different item.

If problem persists after trying the above solutions, contact your nearest authorized service center for assistance.

SPECIFICATIONS

	Item	DXGNi35E
Generator	Type	Inverter Generator
	Rated frequency (Hz)	50
	Rated voltage (V)	220/230/240
	Rated watts (kW)	3.2
	Starting watts (kW)	3.4
	Power factor	1
	Overload Protect (DC)	Non-fuse Protector
	Phase	Single
Engine	Engine	160VI
	Engine type	Single cylinder, 4-Stroke, forced air cooling, OHV
	Displacement (cc)	163
	Fuel type	Unleaded Gasoline
	Fuel tank capacity (L)	8
	Fuel Consumption(g/(kW·h)	⩽395
	Continue Running Time (at half power) (h)	4-4.5
	Oil Capacity (L)	0.45
	Spark Model No.	F7RTC
	Starting mode	Electric
Generator set	Length×Width×Height (mm)	580×345×520
	Net weight (kg)	28.5

Electrical schematic diagram

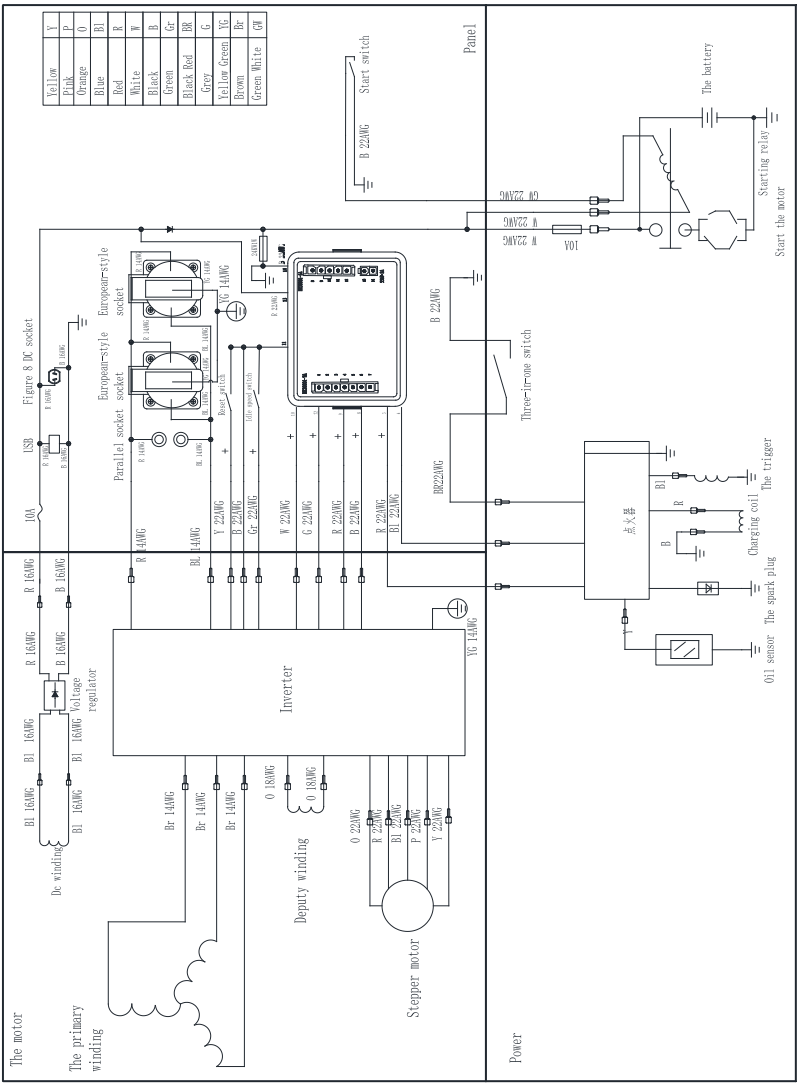

CE Declaración de Conformidad	**ES**
EC Certificate of conformity	**GB**
CE-Konformitätserklärung	**DE**
CE Déclaration de conformité	**F**
CE Declaração de conformidade	**PT**
CE Certificaat van Conformiteit	**NL**
CE Certificato di conformità	**IT**

Fabricante • Manufacturer • Hersteller • Fabricant • Fabricante • fabrikant • Produttore

KAT POWER INTERNATIONAL, S.L.

Por la presente certifica que lo siguiente • Hereby certifies that the following • Bescheinigt hiermit das die nachfolgenden • Certifie ici que • Certifica que as seguintes • Verklaart hierbij dat het navolgende • Con la presente certifica che il seguente

Generadore • Generator • Stromerzeuger • Groupe Électrogène • Gerador • Stroomgenerator • Generatore

DXGNi35E

Cumple con las especificaciones de la directiva de la máquina y las modificaciones posteriores • Is in compliance with the specifications of the machine directive and subsequent modifications • Steht im Einklang mit den folgenden Richtlinien • Est fabriqué en conformité avec les directives suivantes • Está em conformidade com as especificações da diretiva de máquina e modificações subseqüentes • in overeenstemming is met de specificaties van de machinerichtlijn en latere aanpassingen • È conforme alle specifiche della direttiva sulle macchine e successive modifiche

2006/42/EC (MD) Directiva Seguridad de las Máquina / Machine Directive
2014/30/EU (EMC) Directiva Compatibilidad Electromagnética / EMC Directive
2015/863 (amended 2011/65/EU) RoHS Directive
2000/14/EC (amended 2005/88/EC) Directiva Emisiones Sonoras / Sound Level Directive

92 Lwa dBA

2016/1628 Directiva Certificación Emisiones Gases / Emission EURO 5 Directive Engine GK160VI

e9*2016/1628*2016/1628SRA1/P*31037*00

Cumple con los siguientes estándares • Conforms with the following standards • In Übereinstimmung mit den folgende Standards • Conformément aux normes suivantes Em conformidade com os seguintes padrões • Voldoet aan de volgende normen • Conforme ai seguenti standard

EN ISO 8528-13:2016
EN 55012:2007+A1:2009 and EN 61000-6-1:2007 (EMC)
EAN ISO 3744:1995, ISO8528-10:1998 (sound level)

KAT POWER INTERNATIONAL, S.L.
Avda. Alguema, 6C
17771 Sta. Llogaia Alguema, Spain

november 2020



Xavier Soteras
Managing Director

Belgique et Luxembourg België en Luxemburg	DEWALT - Belgium BVBA Egide Walschaertsstraat 16 2800 Mechelen	Tel: NL 32 15 47 37 63 Tel: FR 32 15 47 37 64 Fax: 32 15 47 37 99	**www.dewalt.be** **enduser.BE@SBDinc.com**
Danmark	DEWALT (Stanley Black&Decker AS) Roskildevej 22 2620 Albertslund	Tel: 70 20 15 10 Fax: 70 22 49 10	**www.dewalt.dk** **kundeservice.dk@sbdinc.com**
Deutschland	DEWALT Richard-Klinger-Str. 11 65510 Idstein	Tel: 06126-21-0 Fax: 06126-21-2770	**www.dewalt.de** **infodwge@sbdinc.com**
Ελλάς	DEWALT (Ελλάς) A.E. ΕΔΡΑ-ΓΡΑΦΕΙΑ : Στράβωνος 7 & Λ. Βουλιαγμένης, Γλυφάδα 166 74, Αθήνα SERVICE : Ημερος Τόπος 2 (Χάνι Αδάμ) – 193 00 Ασπρόπυργος	Τηλ: 003021089816 16 Φαξ: 003021089835 70	**www.dewalt.gr** **Greece.Service@sbdinc.com**
España	DEWALT Ibérica, S.C.A. Parc de Negocios "Mas Blau" Edificio Muntadas, c/Bergadá, 1, Of. A6 08820 El Prat de Llobregat (Barcelona)	Tel: 934 797 400 Fax: 934 797 419	**www.dewalt.es** **respuesta.postventa@sbdinc.com**
France	DEWALT (Stanley Black & Decker France SAS) 62 Chemin de la Bruyère CS 60105, 69574 DARDILLY Cedex	Tel: 04 72 20 39 20 Fax: 04 72 20 39 00	**www.dewalt.fr** **scufr@sbdinc.com**
Schweiz Suisse Svizzera	DEWALT In der Luberzen 42 8902 Urdorf	Tel: 044 - 755 60 70 Fax: 044 - 730 70 67	**www.dewalt.ch** **service@rofoag.ch**
Ireland	DEWALT Building 4500, Kinsale Road Cork Airport Business Park Cork, Ireland	Tel: 00353-2781800 Fax: 01278 1811	**www.dewalt.ie** **Sales.ireland@sbdinc.com**
Italia	DEWALT via Energypark 6 20871 Vimercate (MB), IT	Tel: 800-014353 39 039-9590200 Fax: 39 039-9590311	**www.dewalt.it**
Nederlands	DEWALT Netherlands BVPostbus 83, 6120 AB BORN	Tel: 31 164 283 063 Fax: 31 164 283 200	**www.dewalt.nl**
Norge	DEWALT Postboks 4613 0405 Oslo, Norge	Tel: 45 25 13 00 Fax: 45 25 08 00	**www.dewalt.no** **kundeservice.no@sbdinc.com**
Österreich	DEWALT Werkzeug Vertriebsges m.b.H Oberlaaerstrasse 248, A-1230 Wien	Tel: 01 - 66116 - 0 Fax: 01 - 66116 - 614	**www.dewalt.at** **service.austria@sbdinc.com**
Portugal	DEWALT Ed. D Dinis, Quina da Fonte Rua dos Malhoes 2 2A 2º Esq. Oeiras e S. Juliao da Barra, paço de Arcos e Caxias 2770 071 Paço de Arcos	Tel: +351 214667500 Fax: +351214667580	**www.dewalt.pt** **resposta.posvenda@sbdinc.com**
Suomi	DEWALT PL47 00521 Helsinki, Suomi	Puh: 010 400 4333 Faksi: 0800 411 340	**www.dewalt.fi** **asiakaspalvelu.fi@sbdinc.com**
Sverige	DEWALT BOX 94 43122 Mölndal Sverige	Tel: 031 68 61 60 Fax: 031 68 60 08	**www.dewalt.se** **kundservice.se@sbdinc.com**
Türkiye	Sanayi ve Ticareet Bakanlığı tebliğince kullanim ömrü 7 yıldır. Stanley Black & Decker Turkey Alet Üretim San. Tic. Ltd.Şti. AND Kozyatağı - İçerenköy Mah. Umut Sok. AND Ofis Sit. No: 10-12 / 82-83-84 Ataşehir/İstanbul, Türkiye	Tel: +90 216 665 2900 Faks: +90 216 665 2901	**www.dewalt.com.tr** **support@dewalt.com.tr**
United Kingdom	DEWALT, 270 Bath Road; Slough, Berks SL1 4DX	Tel: 01753-567055 Fax: 01753-572112	**www.dewalt.co.uk** **emeaservice@sbdinc.com**
Australia / New Zealand	DEWALT 810 Whitehorse Road Box Hill VIC 3128 Australia	Tel: Aust 1800 338 002 Tel: NZ 0800 339 258	**www.dewalt.com.au** **www.dewalt.co.nz**
Middle East Africa	DEWALT P.O. Box - 17164, Jebel Ali Free Zone (South), Dubai, UAE	Tel: 971 4 812 7400 Fax: 971 4 2822765	**www.dewalt.ae** **support@dewalt.ae**



Manufactured and distributed under license by ;

Kat Power International, S.L.
Avda.Alguema 6C
17771 Sta. Llogaia Alguema, SPAIN

DeWALT®, GUARANTEED TOUGH ® and the yellow and black color scheme are trademarks the DeWALT Industrial Tool Co., used under license.

G9304G3601030